

PLANA

Art. 2552 - L80 P48 H20 Cm

Consolle porta lavabo 80 cm





80 cm washbasin table

Console porte-lavabo 80 cm

Waschtisch 80 cm

Consola para lavabo 80 cm

Консоль для умывальника 80 см

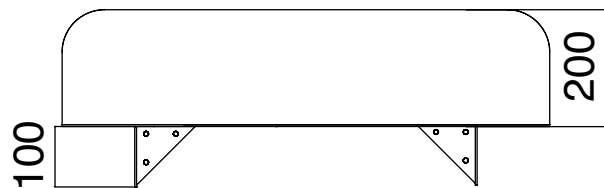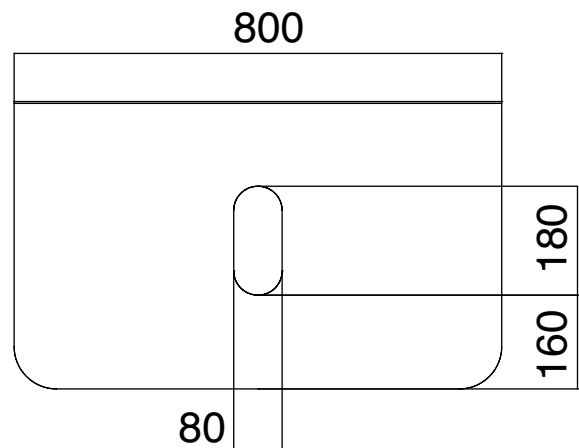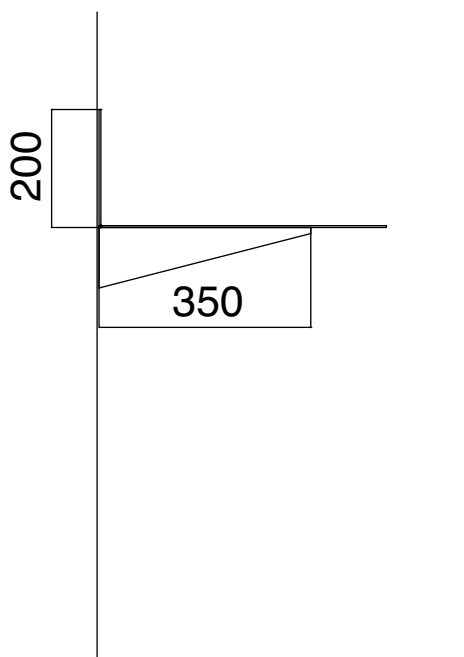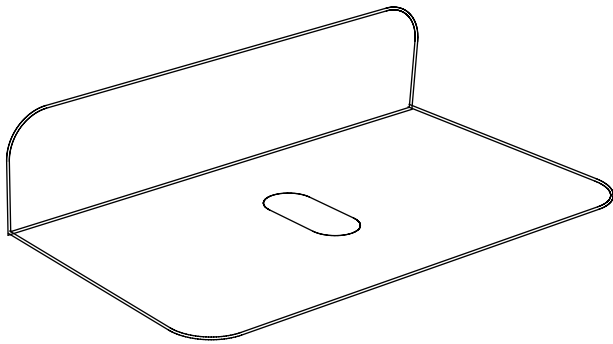

Tolleranza dimensioni $\pm 5\%$


Dimension tolerance $\pm 5\%$



PLANA

Art. 2552 - L80 P48 H20 Cm

Consolle porta lavabo 80 cm
 80 cm washbasin table
 Console porte-lavabo 80 cm
 Waschtisch 80 cm
 Consola para lavabo 80 cm
 Консоль для умывальника 80 см

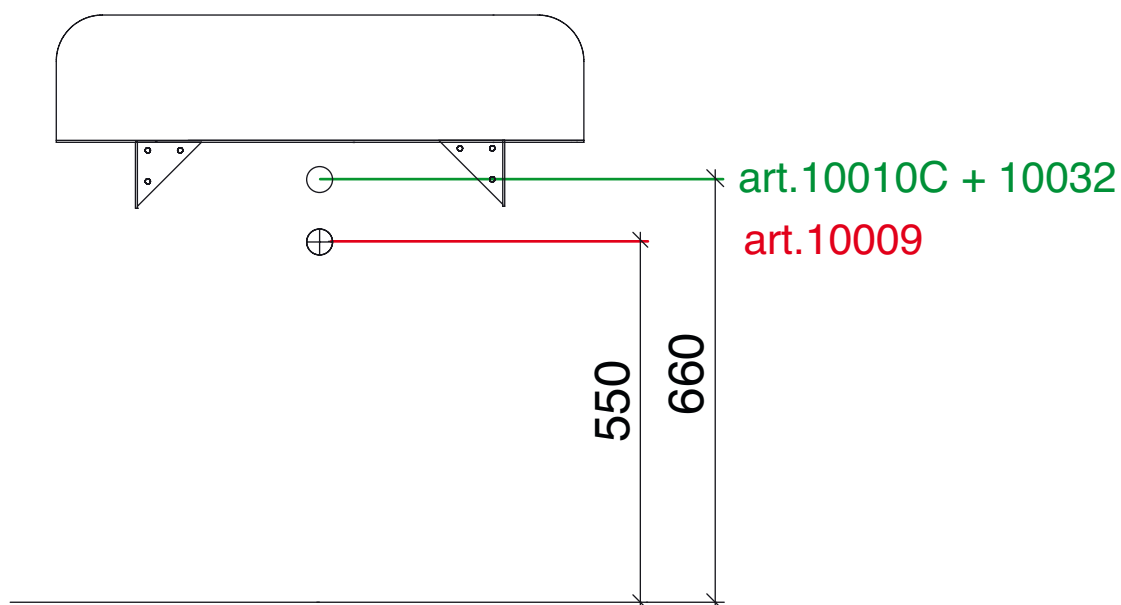

Art. 10010/C



Scarico automatico 1"1/4 click-clack, tappo grande
 Automatic pop-waste 1" 1/4 click-clack, big plug - Bonde clic-clac, grand debit
 Automatischer ablauf click-clack, crosser stöpsel - Valvula automática 1" 1/4 click-clack, tapón grande
 Слив автоматический: клапан 1"1/4, большая пробка

Art. 10032

COMPACT TRAP




Sifone compatto in ottone
 Brass compact trap - Siphon compact en laiton
 Kompakter Siphon aus Messing - Sifón compacto de latón
 Компактный сифон из латуни

Art. 10009



Sifone tondo in ottone ribassato 1"1/4 cromato
 Sp Brass round trap, shorted 1" 1/4 chromed - Syphon petit culot laiton chromé
 Siphon aus verchromtem messing, abgeflacht - Sifón redondo de latón rebajado 1" 1/4 cromado
 Сифон круглого сечения 1"1/4 укороченный, из хромированной латуни

*FORI PER LAVABI - HOLES FOR WASHBASINS
 ORIFICIOS PARA LAVABOS - ОТВЕРСТИЯ ПОД РАКОВИНЫ УМЫВАЛЬНИКА
 ART. 2552 = 800 X 480 mm

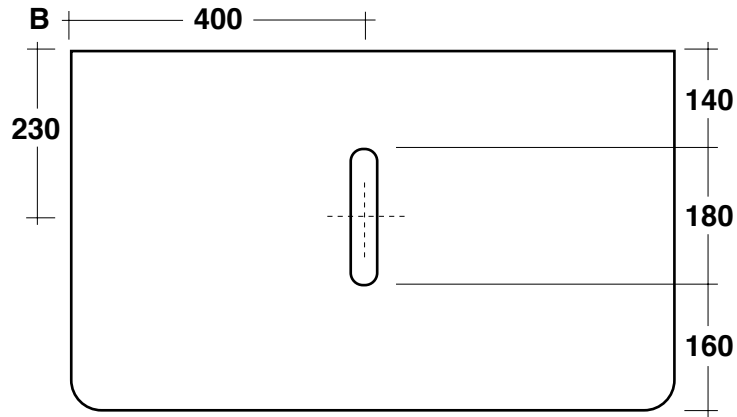

Name	Art.	B				
MOON	5501 - 5502 - 5504 - 5505	■				
BUCKET	8807 - 8808 - 8810 - 8811	■				
BUTTERFLY	4001 - 4002	■				
PLANET	8111 - 8112	■				
NEXT	8306 - 8307	■				
TEOREMA 2.0	5101	■				
GLAM	1803 - 1804 - 1806 - 1807 - 1808	■				
MIZU	9001 - 9003 - 9005 - 9007	■				
THIN-LINE	8010 - 8029 - 8030 - 8045 - 8046	■				
KONG	8052 - 8053	■				

Per i lavabi senza foro rubinetto va utilizzato il rubinetto a muro
 The wall tap must be used for the washbasins without hole
 Pour les lavabos sans percement pour robinet, un robinet mural est utilisé
 Die Waschbecken ohne Abbildung des Wasserhahns werden mit Wandarmatur installiert
 Para los lavabos sin orificio para grifo se debe utilizar el grifo de pared
 Для умывальников без отверстия для крана используется настенный кран